

16 SERVICE MENU SETTINGS

In order to reach service menu,

- First Press **“MENU”**
- Then press the remote control code, which is **“4725”**

16.1 Video Setup

- **Panel Select** <.....>
 - **CHI MEI 16/9 32 inch**
 - **LG 16/9 26 inch**
 - **SAMSUNG 16/9 32 inch**
- **Picture Mute** <.....>
If “Yes” selected, “Picture mute” feature is active.
- **Blue Screen** <.....>
If “Yes” selected, “Blue Background” item is seen in “Feature” menu.
- **YC Delay** <.....>

- **Tuner PAL** <.....> Value between -8 to+7
- **Ext PAL** <.....> Value between -8 to+7
- **SECAM** <.....> Value between -8 to+7
- **NTSC** <.....> Value between -8 to+7
- **AGC (dB)** <.....> Value between 0 to+8

16.2 AudioSetup

- **Equalizer** <.....>
If “Yes” selected, “**Equalizer**” item is seen in “**Sound**” menu.
- **BBE**
- **SRS WOW**
- **Virtual Dolby Surround** <.....>
If “Yes” selected, Virtual Dolby Surround feature is seen in “**Sound**” menu with selected Virtual Dolby Text.
- **Virtual Dolby Text** The selected item is seen as Virtual Dolby Surround Text.
 - **3DS**
 - **Virtual Dolby**
 - **3D Panorama**
- **AVL** <.....>
If “Yes” selected, “**AVL**” item is seen in “**Sound**” menu.
- **Carrier Mute** <.....>
If “Yes” selected, “**Carrier mute**” feature is active.
- **Audio Delay Offset**
- **Prescale**
 - **FM Presc. AVL On** <.....> Value between 0 to +127
 - **AM Presc. AVL On** <.....> Value between 0 to +127
 - **NICAM Presc. AVL On** <.....> Value between 0 to +127
 - **I2S Presc. AVL On** <.....> Value between 0 to +127
 - **SCART Presc. AVL On** <.....> Value between 0 to +127
 - **FM Presc. AVL Off** <.....> Value between 0 to +127
 - **AM Presc. AVL Off** <.....> Value between 0 to +127
 - **NICAM Presc. AVL Off** <.....> Value between 0 to +127
 - **I2S Presc. AVL Off** <.....> Value between 0 to +127
 - **SCART Presc. AVL Off** <.....> Value between 0 to +127
- **Dynamic Bass** <.....>
If “Yes” selected, “**Dynamic Bass**” item is seen in “**Sound**” menu.
- **Subwoofer** <.....>
If “Yes” selected, “**Subwoofer**” item is seen in “**Sound**” menu.

16.3 Options 1

- **VCTP Version** <.....>
 - **Basic+**
 - **Basic**
- **Double Digit** <.....>
If “Yes” selected, “**Double Digit**” button is active for channel selection.
- **TEA6415C Available** <.....>
If “Yes” selected, video switch IC is active on hardware.
- **TEA642X Available**<.....>

If “Yes” selected, audio switch IC is active on hardware.

- **Power-Up Mode <.....>**
 - **StandBy** If selected, TV opens in stand by mode.
 - **L.State** If selected, TV opens in Last State mode.
- **TV Open Mode <.....>**
 - **Source**
 - **1st TV**
 - **Last TV**
- **Select Languages <.....>** “Yes” selected languages are seen as option under the “Language” item in “Feature” menu
 - **Language Set 1**
 - **German <.....>**
 - **French <.....>**
 - **Spanish <.....>**
 - **Italian <.....>**
 - **Danish <.....>**
 - **Finnish <.....>**
 - **Swedish <.....>**
 - **Language Set 2**
 - **Greek <.....>**
 - **Norwegian <.....>**
 - **Dutch <.....>**
 - **Portuguse <.....>**
 - **Polish <.....>**
 - **Turkish <.....>**
 - **Russian <.....>**
 - **Czech <.....>**
 - **Language Set 3**
 - **Hungarian <.....>**
 - **Slovak <.....>**
 - **Slovenian <.....>**
 - **Romanian <.....>**
 - **Bulgarian <.....>**
 - **Croatian <.....>**
 - **Serbian <.....>**
 - **Hebrew <.....>**
- **First APS <.....>**

If “Yes” selected, first time TV opens by asking APS.
- **APS Volume <.....>** value between 0 to+63
- **Burn In Mode <.....>**

If “Yes” selected, TV opens with Burn-In mode. This mode is used in manufacturing.
- **APS Test**
- **HDMI WP <.....>**

If “Yes” selected, HDMI EDID ROM is write protected.

16.4 Options 2

- **Autostore** <.....>
 If “Yes” selected, Channel is automatically stored.
- **Led Type** <.....>
 - **1 Led 1 Colour**
 - **1 Led 2 Colours**
 - **2 Led 2 Colours**
- **PC PIP** <.....>
- **PC Stand By** <.....>

16.5 Service Scan/Tuning Setup

- **Search for L/L'** <.....>
- **Pref. Search Standard** <.....>
 - **BG, DK, I**
 - **L/L'**
 - **M**
- **Station Ident** <.....>
- **ATS Delay Time (ms)** <.....> *Value between 20 to 250*
- **Color Killer Threshold** <.....> *Value between 0 to +255*
- **Tuner Options** <.....>
 - **Control Byte** <.....> *Value between 0 to +255*
 - **Low-Mid – Low Byte** <.....> *Value between 0 to +255*
 - **Low-Mid – High Byte** <.....> *Value between 0 to +255*
 - **Mid-High – Low Byte** <.....> *Value between 0 to +255*
 - **Mid-High – High Byte** <.....> *Value between 0 to +255*
 - **BSW1** <.....> *Value between 0 to +255*
 - **BSW2** <.....> *Value between 0 to +255*
 - **BSW3** <.....> *Value between 0 to +255*

16.6 External Source Settings

- **DTV** <.....>
- **DVD** <.....>
- **Ext 2 S-Video** <.....>
- **Ext 3** <.....>
- **Ext 3 S-Video** <.....>
- **FAV** <.....>
- **BAV** <.....>
- **S-Video** <.....>
- **HDMI 1** <.....>
- **HDMI 2** <.....>
- **YPbPr** <.....>
- **PC** <.....>

16.7 Picture Mode

- **Sources** <.....>
 - **Tuner**
 - **CVBS**
 - **RGB**

- **SVHS**
- **HDMI**
- **YPbPr**
- **PC**
- **PIP**
- **Picture Mode** <.....>
 - **Dynamic**
 - **Natural**
 - **Cinema**
- **Colour Temp** <.....>
 - **Cool**
 - **Normal**
 - **Warm**
- **Contrast** <.....> Value between 0 to +63
- **Brightness** <.....> Value between 0 to +63
- **Sharpness** <.....> Value between 0 to +15
- **Colour** <.....> Value between 0 to +63
- **Backlight** <.....> Value between 0 to +255
- **R** <.....> Value between -63 to +63
- **G** <.....> Value between -63 to +63
- **B** <.....> Value between -63 to +63

16.8 Reset TV-Set

- **Initialize NVM from ROM**
 Press green button to reset the NVM from ROM

17 SOFTWARE UPDATE DESCRIPTION

17.1 Analog Software Update Via I²C

Step.1

Short the second and third pins of PL_402. Power ON and keep shorting the pins 3-5 seconds.

Step.2

Then connect the I²C update tool to parallel port of PC.

Step.3

Connect the other end of the tool to PL_402.

Step.4

Run Cosima_VCTP Visual I²C software update program.

Step.5

When you click to box near “0” at “**Bootloader Version**” item, you will see “**42**”. If you couldn’t see “**42**” or a “**No Acknowledge from Slave!**” is appeared,
 There may be a connection problem sourced from PC port, or update tool.
 Or you may forget to power ON.

Step.6

After “42” is seen, Click “**Erase Flash**”

Step.7

Select the bin. file from near the “**Load Bin**”

Step.8

Click “**Load Bin**” and load the required bin. file.

Step.9

Unpick the I²C cable from Chasis

Step.10

Power off and on again TV set to produce hard reset.

Step.11

Initialize the NVM from “**Reset TV-set**” item from service menu

17.2 Analog Software Update Via UART

Step.1

Connect the serial cable from PC Com port to PL104 connector on 17PRG01-1 module card.

Step.2

Connect the programming cable from SCART(PL103) on 17PRG01-1 module card to SCART1 connector on TV chassis side.

Step.3

Run a RS232 terminal tool like Hyper Terminal.

Step.4

Following settings of the terminal tool are necessary:

Protocol: Xmodem

Port: COMx

Baud Rate: 115200

Data Bits: 8

Parity: none

Stop Bits: 1

Com. Control: none

Step.5

Load the bin file from “**Browse**” and Click “**Send**”

Step.6

Power off and on again TV set to produce hard reset.