

ADJUSTMENT INSTRUCTION WITH SVC MODE

20.SVC mode data Adjustment

NOTE!! When the EEPROM has been replaced, the SVC data should be restored as the function of individual system and specification.

[Enter and exit SVC mode]

Note: into the SVC mode, Initialize with default data.

- 1) Press 5 Seconds MENU buttons on both TV set and Remote Controller at the same time to get into SVC mode.
- 2) Press the PR ▲▼ button several times to find SVC Data.
- 3) Input the corresponding SVC data referring to Table below with the VOL ◀▶, key.
- 4) Press TV/AV button to exit SVC mode

20-1. Factory outgoing setting & Initialize with default data (into the SVC mode)]

Main menu	Change value	Sub menu	Change value
(Panel)	(-15)		
(Model)	(T)		
(TV White Balance)			
Option 1	Option 1 Sub-menu	China/Australia	No
Audio Options		AV1	YUV1
(DRX)	(Sub-menu)	Text	WEST_EU
(NVM Edit)	(Sub-menu)	Top	YES
(Reset TV-set)	(Sub-menu)	VPS/PDC	YES
		Data Service	Text
		ATS Delay Time	60
	Audio Options Sub-menu	M	42
		BG/I/DK	21
		NICAM	26
		FM Radio	10
		Scart Volume	118
		Surround	0
		Mute if no carrier	Yes
		High Deviation	No
		DUAL	No
		MONO	No
		STEREO	Yes
		GAME	No

Waring: Do not change the “()” item...