


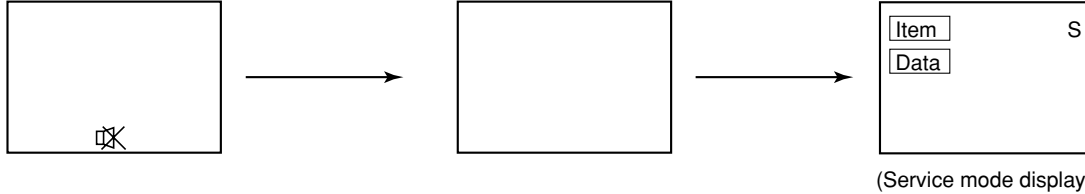


SERVICE MODE


1. ENTERING TO SERVICE MODE

- 1) Press  button once on Remote Control.
- 2) Press  button again to keep pressing.
- 3) While pressing the  button, press MENU button on TV set.







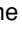


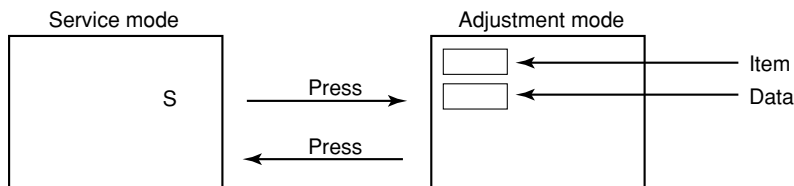2. DISPLAYING THE ADJUSTMENT MENU

- 1) Press MENU button on TV.

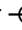

3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

A single horizontal line ON/OFF :	- / - - button (on Remote) or  button (on TV)
Test signal selection :	 button (on Remote)
Selection of the adjustment items :	Channel  /  (on TV or Remote)
Change of the data value :	Volume  +/- (on TV or Remote)
Adjustment menu mode ON/OFF :	MENU button (on TV)
Initialization of the memory (QA02) :	CALL + Channel button on TV ()
Reset the count of operating protect circuit to "00" :	CALL + Channel button on TV ()
"RCUT" selection :	1 button
"GCUT" selection :	2 button
"BCUT" selection :	3 button
"CNTX" (or "SCNT") selection :	4 button
"COLC" selection :	5 button - - - - Color thickness correction
"TNTC" selection :	6 button
Test audio signal ON/OFF (1kHz) :	8 button
Self diagnostic display ON/OFF :	9 button

note: Displayed differently as shown below, depending on the setting of the receiving color system.
COLP (PAL)
COLC (NTSC)
COLS (SECAM)

CAUTION : Never try to perform initialization unless you have changed the memory IC.

4. SELECTING THE ADJUSTING ITEMS

- 1) Every pressing of CHANNEL ▲ button in the service mode changes the adjustment items in the order of table-2. (▼ button for reverse order)

Refer to table-2 for preset data of adjustment mode.
(See SETTING & ADJUSTING DATA on page 13)

5. ADJUSTING THE DATA

- 1) Pressing of VOLUME ▲/▼ button will change the value of data in the range from 00H to FFH. The variable range depends on the adjusting item.

6. EXIT FROM SERVICE MODE

- 1) Pressing POWER button to turn off the TV once.

■ INITIALIZATION OF MEMORY DATA OF QA02

After replacing QA02, the following initialization is required.

1. Enter the service mode, then select any register item.
2. Press and hold the CALL button on the Remote, then press the CHANNEL ▲ button on the TV. The initialization of QA02 has been completed.
3. Check the picture carefully. If necessary, adjust any adjustment item above.
Perform "Auto search Memory" on the owner's manual.

CAUTION: Never attempt to initialize the data unless QA02 has been replaced.

7. TEST SIGNAL SELECTION

- 1) Every pressing of -⊖ button on the Remote Control changes the built-in test patterns on screen as described below in SERVICE MODE.


Signal off ———→ NTSC signals (14 patterns)
 ↑ ——— PAL signals (14 patterns) ←——

Signals	Picture
<ul style="list-style-type: none"> • Red raster • Green raster • Blue raster • All Black • All White 	
<ul style="list-style-type: none"> • Black & White 	
<ul style="list-style-type: none"> • Black cross-bar • White cross-bar • Black cross-bar on green raster 	
<ul style="list-style-type: none"> • Black cross-hatch • White cross-hatch 	
<ul style="list-style-type: none"> • Black cross-dot • White cross-dot 	
<ul style="list-style-type: none"> • H signal (white) • H signal (black) 	

* The signals marked with ■ are not usable to display in the Test signal for some model.

8. SELF DIAGNOSTIC FUNCTION

- 1) Press "9" button on Remote Control during display of adjustment menu in the service mode.
The diagnosis will begin to check if interface among IC's are executed properly.
- 2) During diagnosis, the following displays are shown.

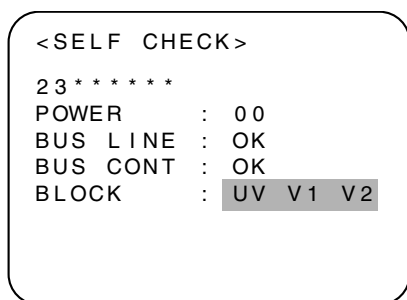

Indicated color of mode now selected : Green and Red
Indicated color of other modes : White

Green : Normal

Red : The microprocessor operates to provide judgement of no video signal. The red color is still indicated though the signal is input, failure may exist in input signal line.


- ① Part number of microprocessor (Q100)
- ② Operation number of protecting circuit ----"00" is normal.
When indication is other than "00", overcurrent apt to flow, and circuit parts may possibly be damaged.
- ③ BUS LINE CHECK ----"OK" is normal.
"SDA1-GND" ----- SDA-GND short circuit.
"SCL1-GND" ----- SCL-GND short circuit.
"SCL1-SDA1" ----- SCL-SDA short circuit.
- ④ BUS CONT ----"OK" is normal.
When indication shows "Q○○○ NG", the device with the number may possibly be damaged.
- ⑤ BLOCK
UV : TV reception mode
V1 : VIDEO 1 input mode (←1)
V2 : VIDEO 2 input mode (←2)

* The items marked with ■ are not usable to display in the SELF DIAGNOSTIC FUNCTION for some model.

DESIGN MODE

1. ENTERING TO DESIGN MODE

- 1) Select the Service mode.
- 2) While pressing \times (or CALL) button on Remote and press MENU button on TV.
- 3) Press MENU button on TV.

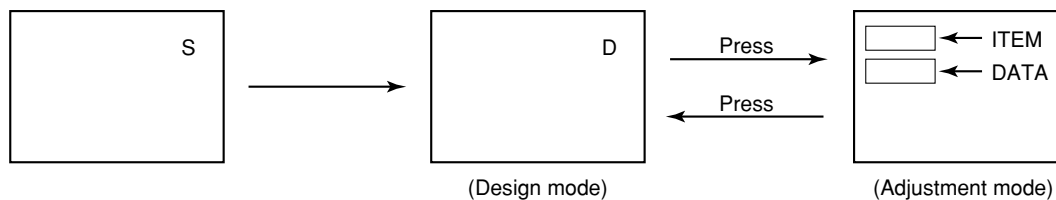

When QA02 is initialized, items "OPT0" and "OPT1" of DESIGN MODE are set to the data of the representative model of this chassis family.

Therefore, because ON-SCREEN specification remains in the state of the representative of model. This model is required to reset the data of items "OPT0" and "OPT1".

2. SELECTING THE ADJUSTING ITEMS

Every pressing of CHANNEL \blacktriangledown button in the design mode changes the adjustment items in the order of table-3. (\blacktriangle button for reverse order)

Refer to table-3 for data of design mode.
(See SETTING & ADJUSTING DATA on page 13)

3. ADJUSTING THE DATA

Pressing of VOLUME \blacktriangle or \blacktriangledown button will change the value of data.