


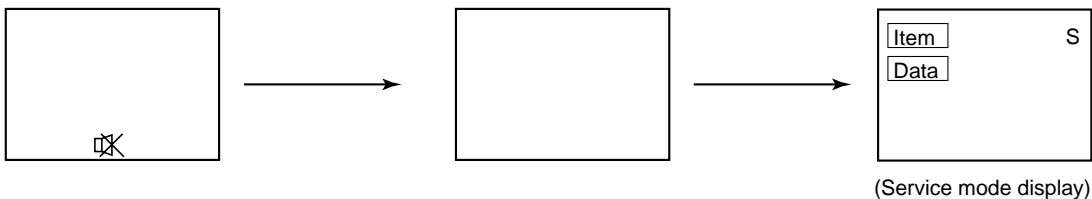


# SERVICE MODE

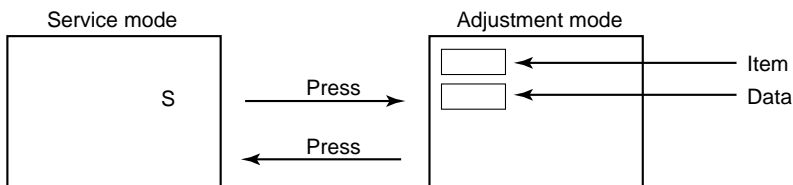
## 1. ENTERING TO SERVICE MODE

- 1) Press  button once on Remote Control.
- 2) Press  button again to keep pressing.
- 3) While pressing the  button, press MENU button on TV set.










## 2. DISPLAYING THE ADJUSTMENT MENU

- 1) Press MENU button on TV.



## 3. KEY FUNCTION IN THE SERVICE MODE

The following key entry during display of adjustment menu provides special functions.

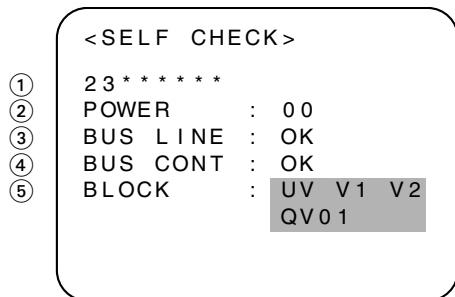
- |   |   |
|---|---|
| A single horizontal line ON/OFF :                     | - / - - button (on Remote) or  button (on TV)   |
| Test signal selection :                               |  button (on Remote)  |
| Selection of the adjustment items :                   | Channel  /  (on TV or Remote) |
| Change of the data value :                            | Volume  +/- (on TV or Remote)  |
| Adjustment menu mode ON/OFF :                         | MENU button (on TV)   |
| Initialization of the memory (QA02) :                 | CALL + Channel button on TV (  )   |
| Reset the count of operating protect circuit to "00": | CALL + Channel button on TV (  )   |
| "RCUT" selection :                                    | 1 button  |
| "GCUT" selection :                                    | 2 button  |
| "BCUT" selection :                                    | 3 button  |
| "CNTX" (or "SCNT") selection :                        | 4 button  |
| "COLC" selection :                                    | 5 button - - - - Color thickness correction   |
| "TNTC" selection :                                    | 6 button  |
| Test audio signal ON/OFF (1kHz) :                     | 8 button  |
| Self diagnostic display ON/OFF :                      | 9 button  |
- note: Displayed differently as shown below, depending on the setting of the receiving color system.  
COLP (PAL)  
COLC (NTSC)  
COLS (SECAM)

CAUTION : Never try to perform initialization unless you have changed the memory IC.



## 8. SELF DIAGNOSTIC FUNCTION

- 1) Press "9" button on Remote Control during display of adjustment menu in the service mode.  
The diagnosis will begin to check if interface among IC's are executed properly.
- 2) During diagnosis, the following displays are shown.



- ① Part number of microcomputer (QA01)
- ② Operation number of protecting circuit ----"00" is normal.  
When indication is other than "00", overcurrent appts to flow, and circuit parts may possibly be damaged.
- ③ BUS LINE CHECK ----"OK" is normal.  
"SDA1-GND" ----- SDA-GND short circuit.  
"SCL1-GND" ----- SCL-GND short circuit.  
"SCL1-SDA1" ----- SCL-SDA short circuit.
- ④ BUS CONT ----"OK" is normal.  
When indication shows "Q ○○○ NG", the device with the number may possibly be damaged.
- ⑤ BLOCK  
UV : TV reception mode  
V1 : VIDEO 1 input mode (←①)  
V2 : VIDEO 2 input mode (←②)

Indicated color of mode now selected : Green and Red  
Indicated color of other modes : White

Green : Normal

Red : The microcomputer operates to provide judgement of no video signal. The red color is still indicated though the signal is input, failure may exist in input signal line including QV01.

QV01 : In case of indication green ---Normal  
In case of indication red with input signal---  
Failure may exist in output line including QV01.


**NOTE:** Component which controls character display on screen is QT01 (TELETTEXT IC.). If this display function fails to operate due to damage in QT01, self diagnosis procedure is as follows.

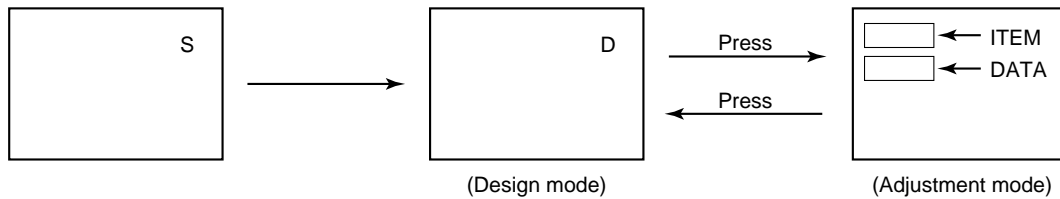
- (1) In case that power indicator is blinking with interval of 0.5 seconds; it means protecting circuit (Current limiter) is operating, and circuit components may possibly be damaged. Check related components.
- (2) In case that power indicator is blinking with interval of 1 second; Protecting circuit does not operate, but a part of Bus line does not operate normally. Check Bus line.

\* The items marked with ■ are not usable to display in the SELF DIAGNOSTIC FUNCTION for some model.

# DESIGN MODE

## 1. ENTERING TO DESIGN MODE

- 1) Select the Service mode.
- 2) While pressing  (or CALL) button on Remote and press MENU button on TV.
- 3) Press MENU button on TV.



When QA02 is initialized, items "OPT0" and "OPT1" of DESIGN MODE are set to the data of the representative model of this chassis family.

Therefore, because ON-SCREEN specification remains in the state of the representative of model. This model is required to reset the data of items "OPT0" and "OPT1".

## 2. SELECTING THE ADJUSTING ITEMS

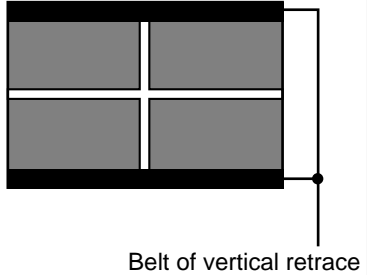
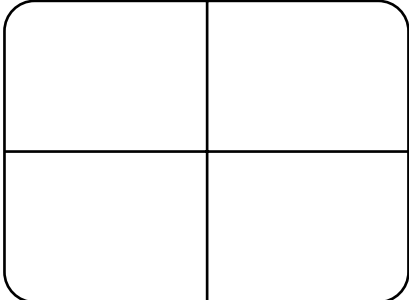
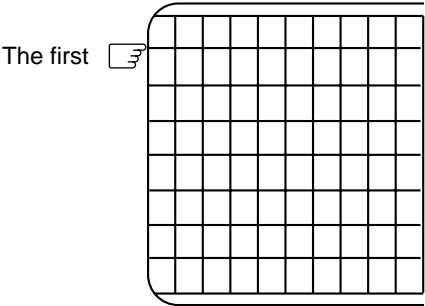
Every pressing of CHANNEL ▼ button in the design mode changes the adjustment items in the order of table-3. (▲ button for reverse order)





Refer to table-3 for data of design mode.  
(See SETTING & ADJUSTING DATA on page 16)

## 3. ADJUSTING THE DATA

Pressing of VOLUME ▲ or ▼ button will change the value of data.

# ELECTRICAL ADJUSTMENTS

ITEM	ADJUSTMENT PROCEDURE
<p>FOCUS VR ADJ</p>	<ol style="list-style-type: none"> <li>1. Enter the service mode, then select any register item.</li> <li>2. Press the TV/VIDEO button on the Remote until the black cross-bar pattern appears on the screen.</li> <li>3. Adjust the FOCUS control (on T461) for well defined scanning lines on the picture screen.</li> </ol>
<p>SUB-BRIGHTNESS (BRTC)</p> <p>Note: Constrict the picture height until the vertical retrace line appears adjusting the item HIT (HEIGHT).</p>	<ol style="list-style-type: none"> <li>1. Set CONTRAST to minimum, and BRIGHTNESS to center by adjusting user controls.</li> <li>2. Set the TV in service mode to get white cross-bar of inside pattern.</li> <li>3. Select BRTC (brightness correction), and adjust the <math>\blacktriangle</math> - <math>\blacktriangledown</math> button to reduce the value so that white portion of inside pattern slightly light.</li> <li>4. Adjust <math>\blacktriangle</math> - <math>\blacktriangledown</math> button to increase the data value of BRTC, and set it just before the difference between the belt of vertical retrace and the border of black portion of inside pattern is visible. After that, return vertical height and contrast.</li> </ol> <div style="text-align: right;">  </div>
<p>HORIZONTAL POSITION ADJUSTMENT (HPOS)</p> <p>VERTICAL POSITION ADJUSTMENT (VPOS)</p>	<ol style="list-style-type: none"> <li>1. Set the TV in service mode, and get black or white cross-bar signal with VIDEO button on remote hand unit.</li> <li>2. Select either HPOS (Horizontal picture phase) or VPOS (Vertical picture phase) with CHANNEL <math>\blacktriangle</math>, <math>\blacktriangledown</math> buttons, and adjust horizontal or vertical picture position in the center of screen with VOLUME <math>\blacktriangle</math> - <math>\blacktriangledown</math> buttons.</li> </ol> <div style="text-align: center;">  </div>
<p>VERTICAL AMPLITUDE ADJUSTMENT (HIT)</p>	<ol style="list-style-type: none"> <li>1. Set the TV in service mode, and get black or white cross-hatch signal with VIDEO button on remote hand unit.</li> <li>2. Select HIT (Vertical amplitude) with CHANNEL <math>\blacktriangle</math>, <math>\blacktriangledown</math> buttons, and adjust vertical amplitude with VOLUME <math>\blacktriangle</math> - <math>\blacktriangledown</math> buttons so that vertical amplitude lacks a little.</li> <li>3. Adjust vertical amplitude with VOLUME <math>\blacktriangle</math> - <math>\blacktriangledown</math> buttons so that the first bar on cross-hatch signal touches edge of screen.</li> </ol> <div style="text-align: right;">  </div>

ITEM	ADJUSTMENT PROCEDURE
<p>WHITE BALANCE ADJUSTMENT</p> <ul style="list-style-type: none"> <li>● CUTOFF ADJUSTMENT (RCUT) (GCUT) (BCUT)</li> <li>● DRIVE ADJUSTMENT (GDRV) (BDRV)</li> </ul>	<ol style="list-style-type: none"> <li>1. Set Contrast to 40, and brightness to +20 by picture control.</li> <li>2. Set the TV in service mode, and get the inside W/B adjusting signal with VIDEO button.</li> <li>3. Select RCUT, GCUT and BCUT with CHANNEL ▲, ▼ buttons, to set individual values to Initial reference data, and to set GDRV and BDRV to Initial reference data with VOLUME ▲ - /+ buttons (See page 16).</li> <li>4. Press  button on the remote control and rotate Screen VR to get one slight horizontal line on screen. Note: Every pressing of  button provides Horizontal line picture and Normal picture alternately.</li> <li>5. Press  button to release horizontal line picture, and select the two other colors which did not light in the above step with CHANNEL ▲, ▼ buttons. Then tap VOLUME ▲ - /+ buttons so that three colors slightly light in the same level.</li> </ol> <ul style="list-style-type: none"> <li>※ To correct white balance in light area, select GDRV and BDRV with CHANNEL ▲, ▼ buttons to adjust.</li> <li>※ To correct white balance in dark area, perform fine adjustment of RCUT, GCUT and BCUT.</li> </ul> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin-top: 10px;"> <div style="border: 1px solid black; width: fit-content; margin: 0 auto; padding: 5px; text-align: center;">Light area check (to show white)</div> <div style="text-align: center; margin-top: 20px;">Dark area check (to show black)</div> </div>
<p>NOTE: It is released built-in test pattern by changing the adjustment item for some model. In this case, select the adjustment item with channel ▲ ▼ buttons first and then select the built-in test pattern with  button.</p>	

**S1E: Series (Reference factory adjustment)**

**1 SUB COLOUR CONTRAST (SCNT)**

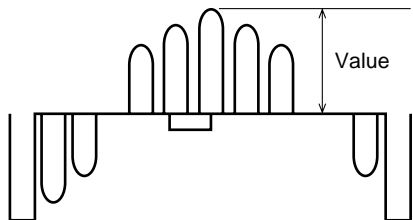
- (Measuring point) Q501 #20 (R-OUT)
  - (Adjusting signal) Sub Bright (NTSC) signal
  - (Adjusting method)
    - 1) Set user control to the standard 1.
    - 2) Change to adjust SCNT data.
    - \* It make the point which doesn't have a change and it adjust with screen VR
- SPEC:  $2.5 \pm 0.2V_{p-p}$

**2 SUB BRIGHT (BRTC)**

- (Adjusting signal) Sub Bright (PAL or NTSC) signal
  - (Adjusting method)
    - 1) Set user control to the standard 1.
    - 2) Change BRTC data to set black collapse numbers by eye check.
- SPEC:  $4 \pm 1.5$  bars
- \* Note: This ITEM Adjust at last

**3 SUB COLOUR CENTER (COLP)**

- (Measuring point) Q501 #22 (B-OUT)
- (Adjusting signal) Sub Bright (PAL) signal
- (Adjusting method)
  - 1) Set user control to the standard 1.
  - 2) Change COLP data (COLC Difference data) to adjust the 6th peak amplitude of rainbow color bar.



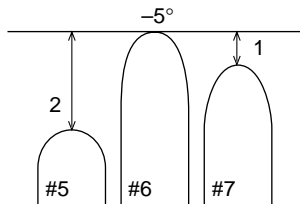
Adjust the amplitude of color bar (p-p value of the upper half)

$1.4 \pm 0.2V$  (p-p)

\* Note: This ITEM Adjust after (COLC)

**4 SUB TINT CENTER (FOR M-NTSC MODEL) (TNTC)**

- (Measuring point) Q501 #22 (B-OUT)
- (Adjusting signal) Sub Bright (NTSC) signal
- (Adjusting method) Change TNTC data to adjust the 5th pointion to the 6th level of B-Y signal and the 7th level difference shuld regulate to 2:1



SPEC:  $-5.0^\circ \pm 5^\circ$

\* Note: This ITEM Adjust after (COLC)